

Trailer socket, rear fog light switch-off

- E23 - Front and rear fog light switch
- F216 - Rear fog light cut-out contact switch
- J446 - Parking aid control unit
- S235 - Fuse 35 in fuse holder
- T1 - Single connector, near left rear fog light
- T1h - 1-pin connector
- T3 - 3-pin connector, on trailer socket
- T6c - 6-pin connector, blue, coupling station on left of A-pillar
- T10a - 10-pin connector, brown, coupling station on left of A-pillar
- T13 - 13-pin connector, on trailer socket
- U10 - Trailer socket
- 77 - Earth point, lower part of left B-pillar
- 238 - Earth connection 1, in interior wiring harness
- 500 - Screw connection 1 (30), on relay plate
- A52 - Positive connection 2 (30), in dash panel wiring harness
- W4 - Connection 1 (rear fog light), in rear wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Passat


Current Flow Diagram

No. 95 / 4



Rear right turn signal, right reversing light, right brake and tail light

- F - Brake light switch
- M8 - Rear right turn signal bulb
- M17 - Right reversing light bulb
- M22 - Right brake and tail light bulb
- S22 - Fuse 22 in fuse holder
- T4c - 4-pin connector, on right rear fog light
- T6b - 6-pin connector, on right rear fog light
- T6c - 6-pin connector, blue, coupling station on left of A-pillar
- T10a - 10-pin connector, brown, coupling station on left of A-pillar
- 64 - Earth point, right tail light bulb holder
- 78 - Earth point, lower part of right B-pillar
- 197 - Earth connection -4-, in rear wiring harness
- A5 - Positive connection (right turn signal), in dash panel wiring harness
- W1 - Positive connection 1 (54), in tail light wiring harness

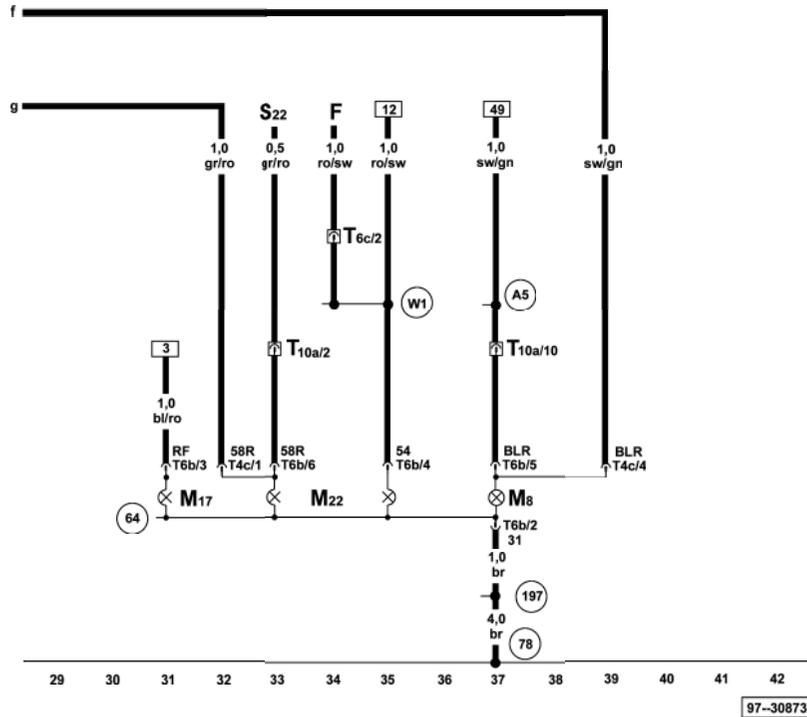


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Passat

Current Flow Diagram

No. 95 / 5

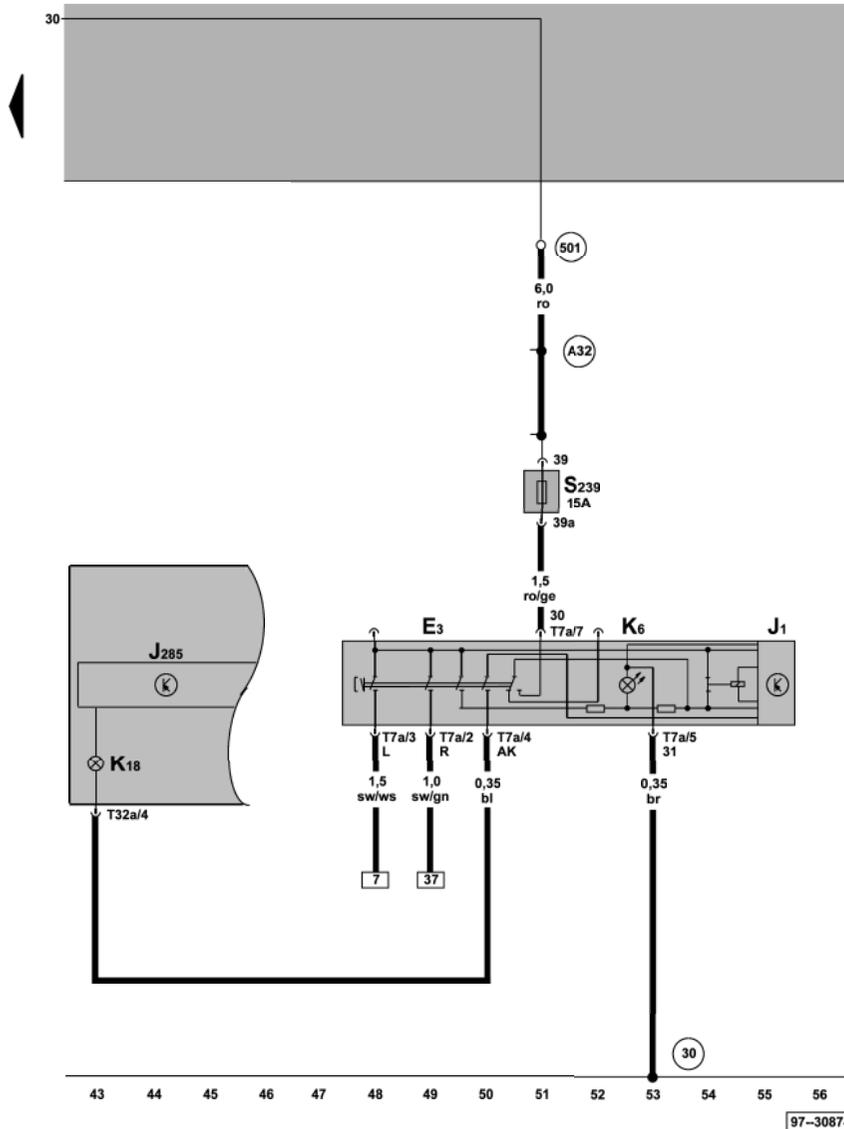

Control unit with display in dash panel insert, hazard warning light switch, turn signal relay, hazard warning light system

- E3 - Hazard warning light switch
- J1 - Turn signal relay
- J285 - Control unit with display in dash panel insert
- K6 - Hazard warning light system warning lamp
- K18 - Trailer operation warning lamp
- S239 - Fuse in fuse holder
- T7a - 7-pin connector, on chamber 4, on hazard warning light switch (on models without trailer coupling the hazard warning light switch is here connected)
- T32a - 32-pin connector, blue, on dash panel insert
- 30 - Earth point 1, next to relay plate
- 501 - Screw connection 2 (30), on relay plate
- A32 - Positive connection (30), in dash panel wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink