


Automatic intermittent wash/wipe relay, automatic anti-dazzle interior mirror, rain sensor

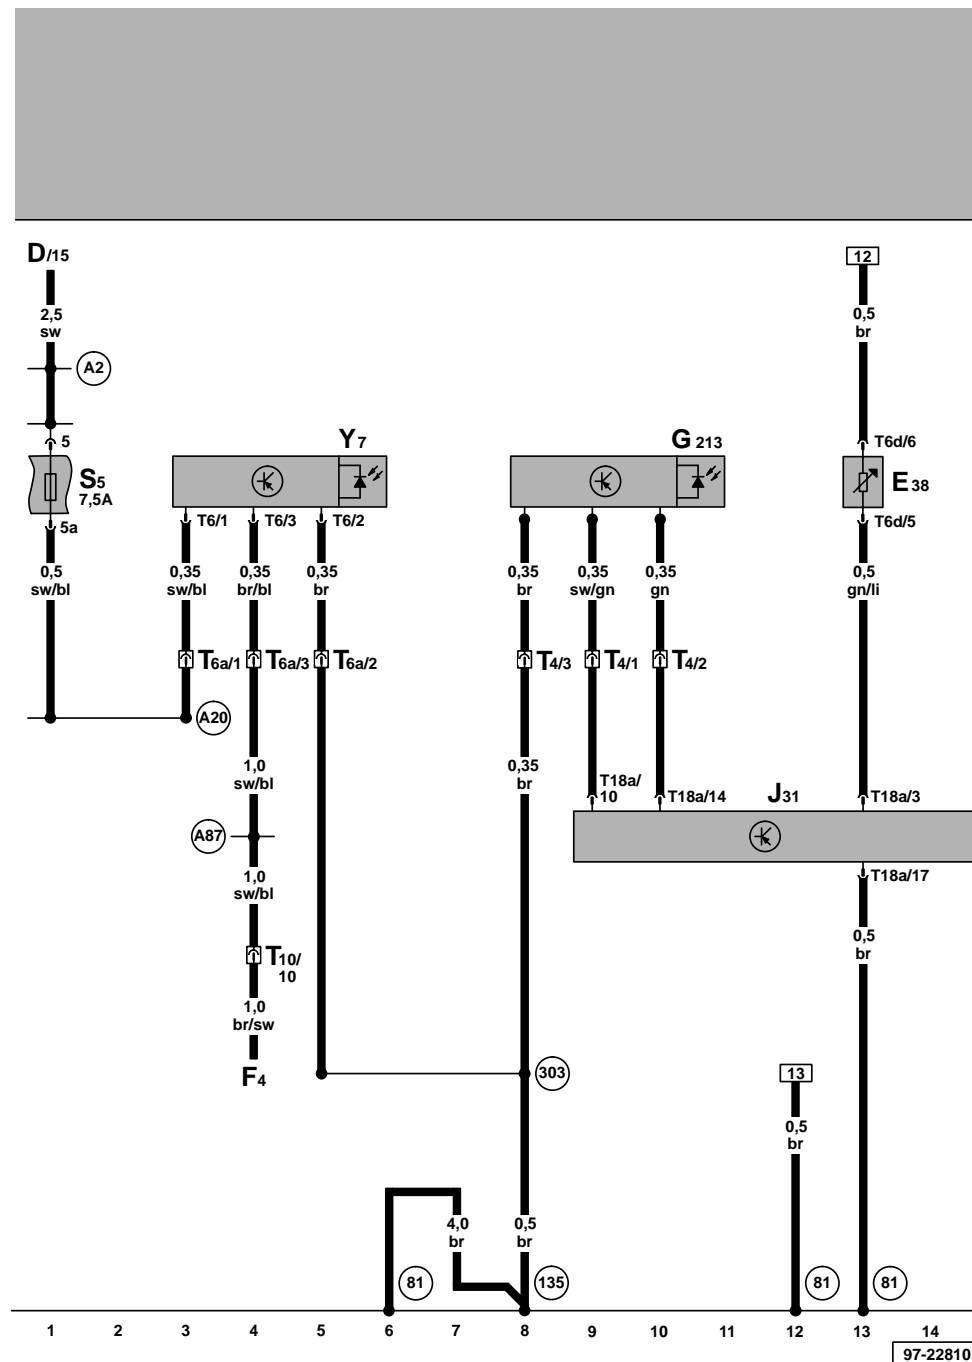


- D - Ignition/starter switch
- E38 - Intermittent wiper control
- F4 - Reversing light switch
- G213 - Rain sensor
- J31 - Automatic intermittent wash/wipe relay
- S5 - Fuse in relay plate fuse box
- T4 - 4-pin connector, near front interior light
- T6 - 6-pin connector, near front interior light
- T6a - 6-pin connector, near front interior light
- T6d - 6-pin connector
- T10 - 10-pin connector, orange, in protective housing for connectors, left in plenum chamber
- T18a - 18-pin connector
- Y7 - Automatic anti-dazzle interior mirror
- (81) - Earth connection -1-, in dash panel wiring harness
- (135) - Earth connection -2-, in dash panel wiring harness
- (303) - Earth connection rain sensor/mirror in interior wiring harness
- (A2) - Positive (+) connection (15), in dash panel wiring harness
- (A20) - Connection (15a), in dash panel wiring harness
- (A87) - Connection (RL), in dash panel wiring harness

**Relay for windscreen wiper intermittent operation,
switch for windscreen wiper intermittent operation,
windscreen wiper motor**

- E22 – Intermittent wiper switch
- J31 – Automatic intermittent wash/wipe relay
- J... – Engine control unit
- S240 – Fuse in fuse holder
- S227 – Fuse in fuse holder
- T5c – 5-pin connector, on wiper motor
- T8c – 8-pin connector
- T10 – 10-pin connector, orange, in protective housing for connectors, left in plenum chamber
- T18a – 18-pin connector
- V – Windscreen wiper motor

- (42) – Earth point on the steering column
- (81) – Earth connection -1-, in dash panel wiring harness
- (179) – Earth connection, in left headlight wiring harness
- (199) – Earth connection -3-, in dash panel wiring harness
- (503) – Screw connection (75x), on relay plate
- A27 – Connection (speed signal), in dash panel wiring harness
- A96 – Connection (53a), in dash panel wiring harness
- A97 – Connection (53), in dash panel wiring harness
- A102 – Connection (windscreen wiper), in dash panel wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow

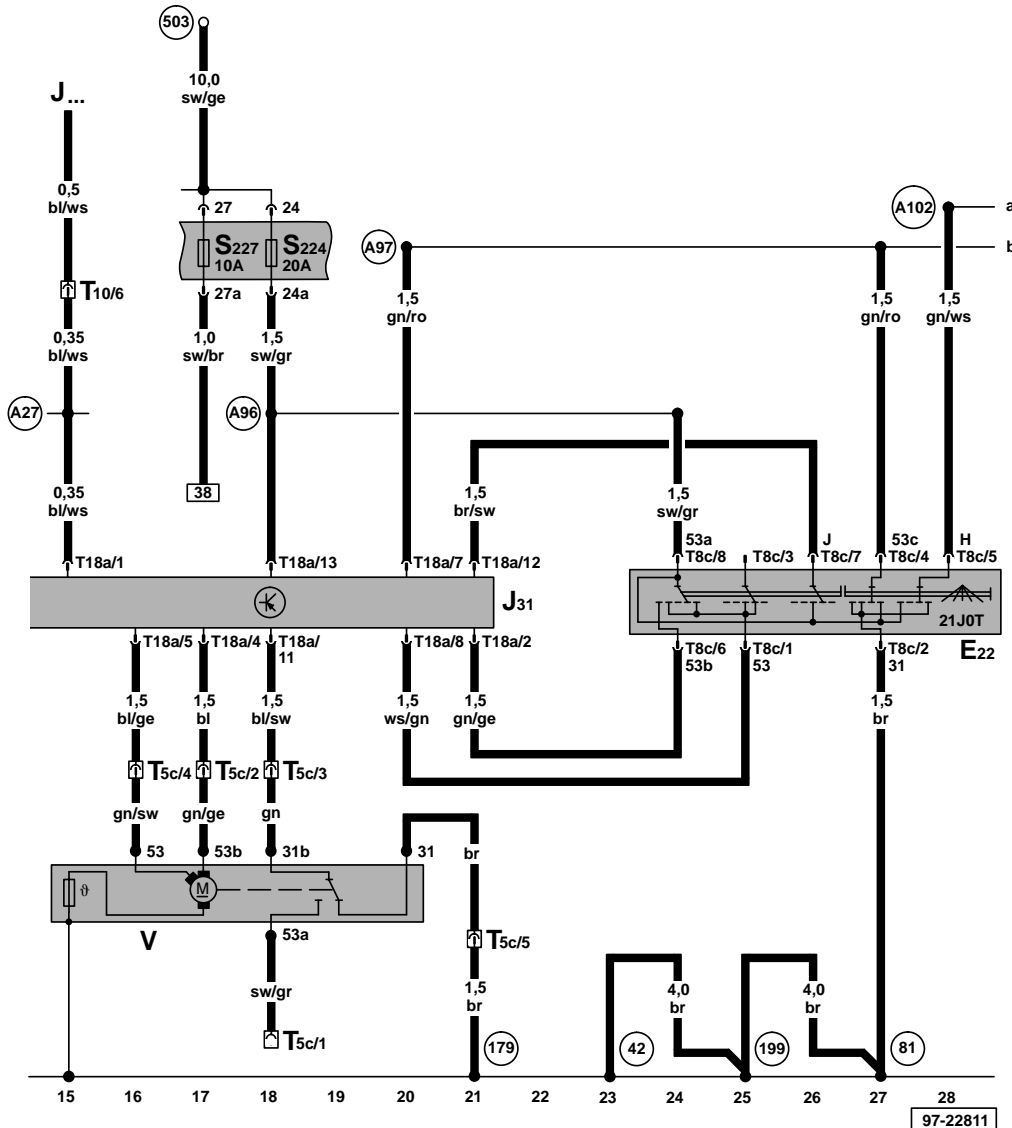


97-22811



- T5a - 5-pin connector, pink, left C pillar coupling station
- T5h - 5-pin connector, near lower left A pillar, woven into wiring harness
- T5i - 5-pin connector, near lower left A pillar, entwined in wiring harness
- V12 - Rear window wiper motor
- V59 - Windscreen and rear window washer pump

- 50 – Earth point, on left luggage compartment
- 86 – Earth connection -1-, in rear wiring harness
- 98 – Earth connection, in tailgate/boot lid wiring harness
- A97 – Connection (53), in dash panel wiring harness
- A102 – Connection (windscreen wiper), in dash panel wiring harness

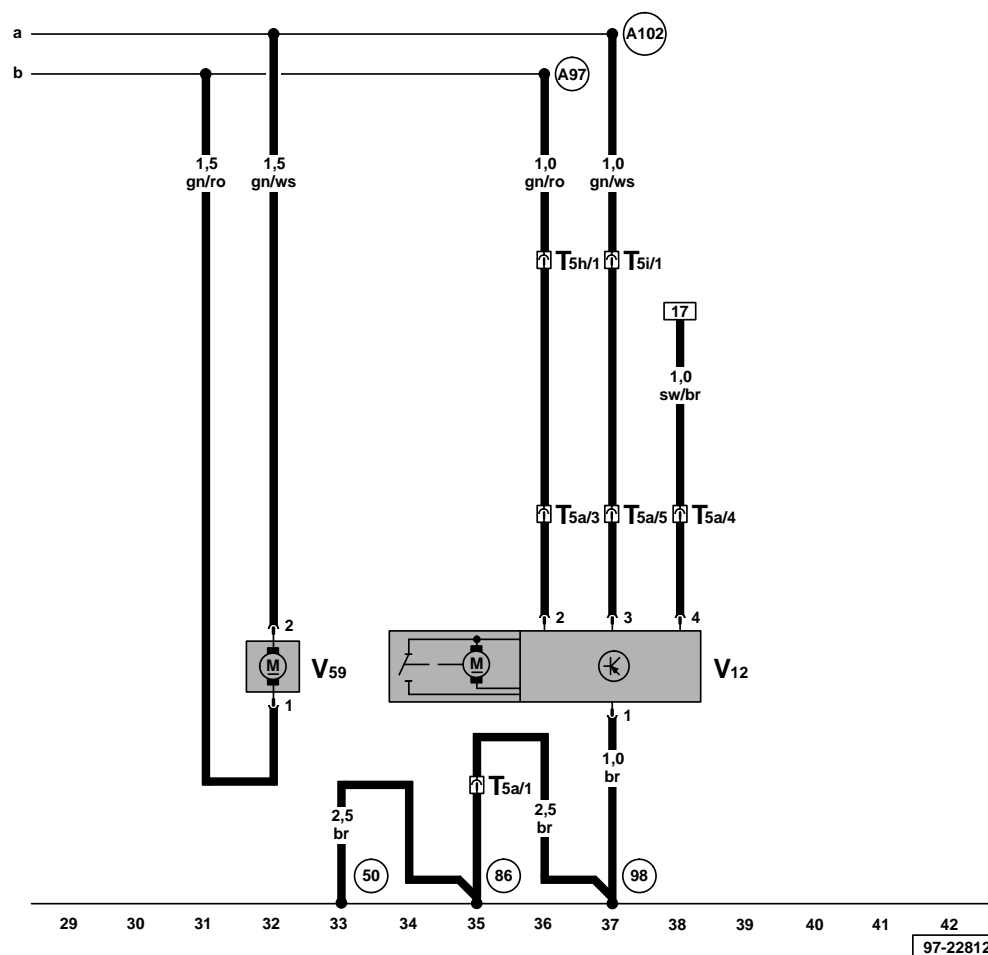

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow