


Passat

Current Flow Diagram

No. 7 / 7

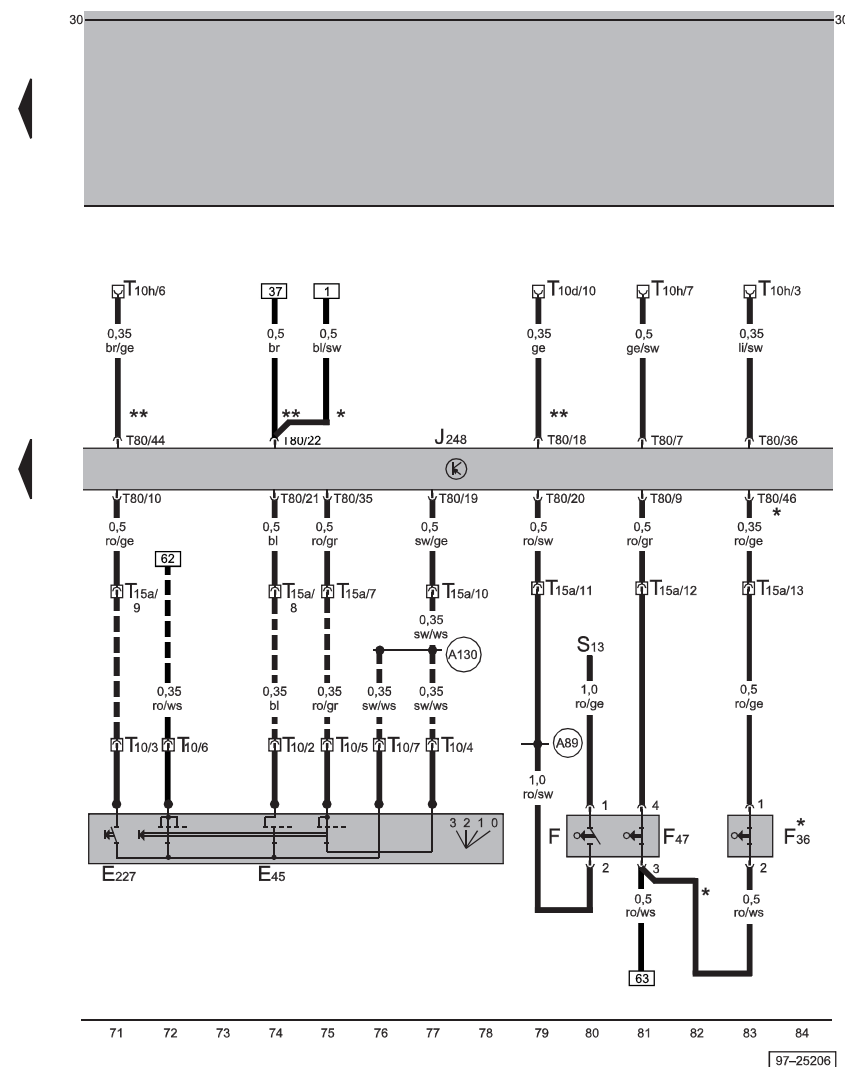

Diesel direct injection system control unit, cruise control system (CCS) switch, brake light switch, brake pedal switch for CCS

- E45 - Cruise control system switch, position 0 = OFF in detent, position 1 = OFF with button, position 2 = ON, position 3 = RES
- E227 - Cruise control system (CCS) SET button
- F - Brake light switch
- F36 - Clutch pedal switch
- F47 - Cruise control system brake pedal switch, diesel direct injection system
- J248 - Diesel direct injection system control unit, in protective housing for control units
- S13 - Fuse 13 on fuse holder
- T10 - 10-pin connector, black, next to steering column
- T10d - 10-pin connector, brown, on protective housing for control units on left in engine compartment
- T10h - 10-pin connector, blue, on protective housing for control units on left in engine compartment
- T15a - 15-pin connector, white, on protective housing for control units on left in engine compartment
- T80 - 80-pin connector, on diesel direct injection system control unit
- A89 - Connection wire (brake light switch), in dash panel wiring harness
- A130 - Connection (cruise control system), in dash panel wiring harness
- - Only models with cruise control system (CCS)
- * - Only models with manual gearbox
- ** - Only models with automatic gearbox